




INSTALLATION INSTRUCTIONS



HONDA CIVIC 1.5L

PART NO. 19652

BILL OF MATERIALS:

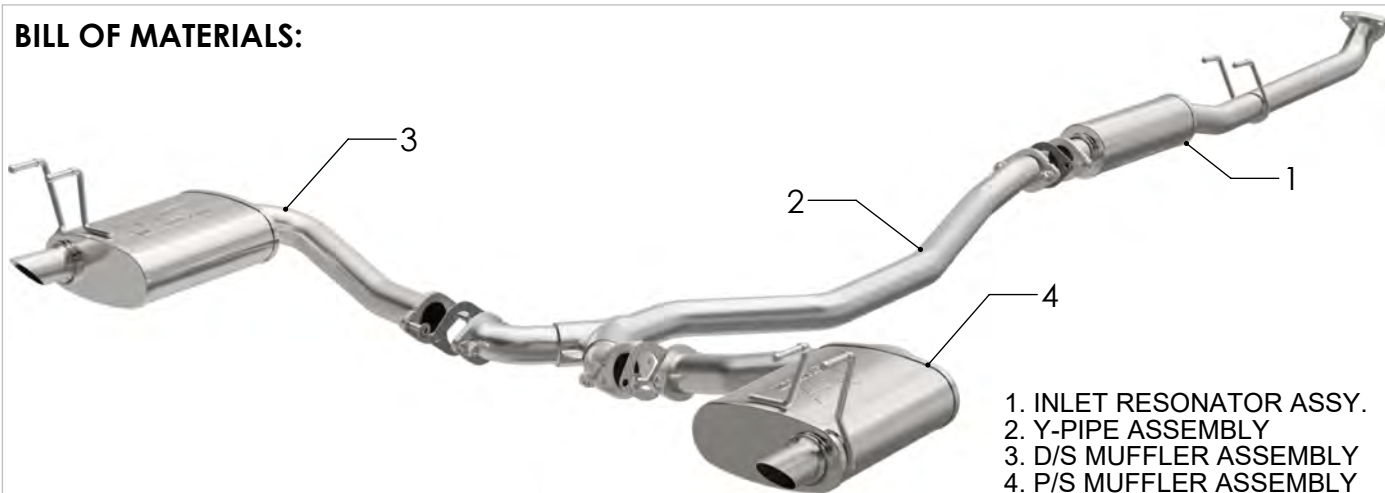

WEAR SAFETY
GLASSES



READ INSTRUCTIONS
THOROUGHLY BEFORE
INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

1. [3] 2-Bolt Gasket
2. [6] Bolt Hex 7/16 x 1.50"
3. [6] Nut Hex Flange 7/16"
4. [6] Washer Split Lock 7/16"
5. [12] Washer Flat 7/16"

MINIMUM REQUIRED TOOLS:



15mm



Hanger Tool
(Or Pry Bar)

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or V-band clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 70 in-lbs for V-band clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 1901 Corporate Centre Dr - Oceanside, CA 92056 | 1(800)990-0905

Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com

INSTALLATION INSTRUCTIONS



Step 1. Begin removal of the OEM exhaust system by unbolting the inlet flange attaching the exhaust to the catalytic converter. Do not discard or damage the OEM fasteners or rubber insulators as they will be used to install the new system



Step 2. Unbolt the drivers side OEM muffler assembly at the flange junction. Disengage all welded hangers from the rubber isolators. The OEM exhaust system may now be removed.



Step 3. Begin installation of your new MAGNAFLOW system by attaching the Inlet flange of the Inlet Resonator Assembly to the catalytic converter outlet using the OEM fasteners. Engage the welded hanger to the rubber isolator. Keep all fasteners and clamps loose until final adjustment.




Step 4. Next attach the Y-Pipe Assembly to the Inlet Resonator Assembly by fastening the flanges using the supplied gasket and hardware.

INSTALLATION INSTRUCTIONS



Step 5: Loosely attach both driver and passenger side Muffler Assembly flanges to the Y-Pipe Assembly and position the tips into the openings in the valance. Secure with the supplied gaskets and hardware. Engage welded hangers to rubber isolators.

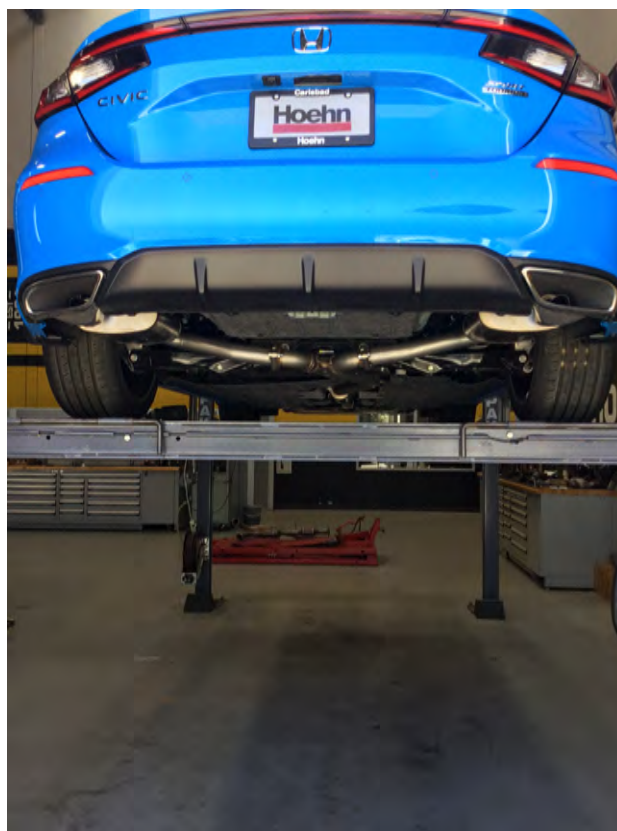

Step 6: Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of these instructions. Inspect all fasteners after 25-50 miles for operation and re-tighten if necessary.

MAGNAFLOW: 1901 Corporate Centre Dr - Oceanside, CA 92056 | 1(800)990-0905
Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com