




INSTALLATION INSTRUCTIONS



FORD F-150

PART NO. 19564

BILL OF MATERIALS:

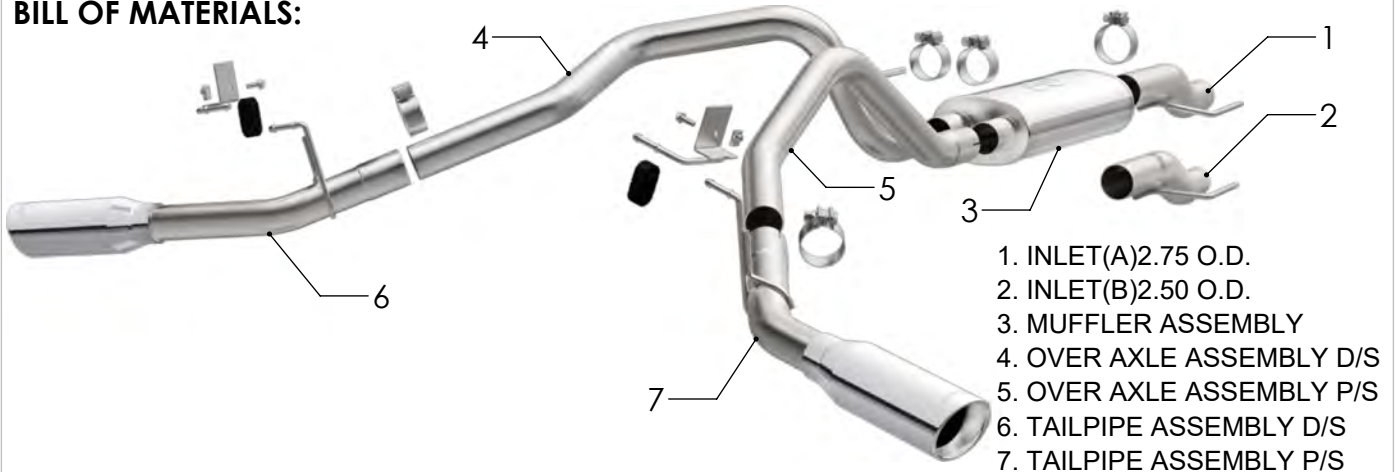

SHOP SUPPLIES:



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

1. [4] 2.50" Clamp
2. [1] 3.00" Clamp
3. [1] Hanger Brkt. Assy. P/S
4. [1] Hanger Brkt. Assy. D/S
5. [2] Rubber Insulator
6. [2] M8x1.25 Bolt Hex
7. [2] M8x1.25 Nut

MINIMUM REQUIRED TOOLS:



15 mm



Hanger Tool (Or Pry Bar)

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS




WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lb for band clamps and 30-35 ft-lb for U-bolt clamps. Over tightening will result in the clamps breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 1901 Corporate Centre Dr - Oceanside, CA 92056 | 1(800)990-0905

Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com

INSTALLATION INSTRUCTIONS

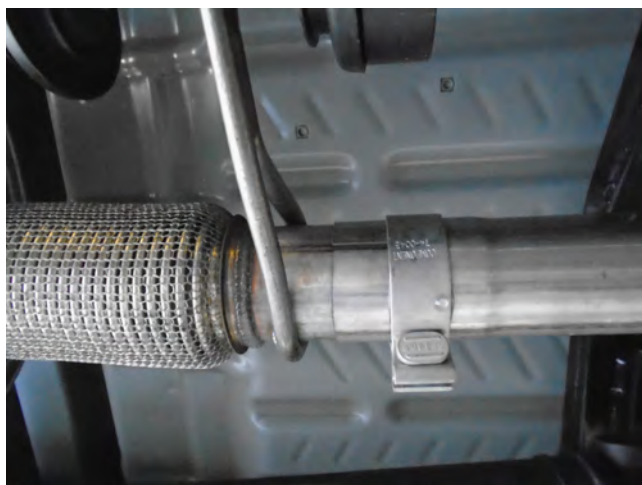

Step 1. To remove the OEM exhaust system, loosen the clamp attaching the systems inlet pipe to the catalytic converter outlet pipe. Disengage all welded hangers from the OEM rubber insulators. Do not discard the OEM fasteners or damage the rubber insulators as they will be needed to mount your new MAGNAFLOW system.

TABLE 1.

INLET	VEHICLE
A	2021 2.7L/3.5L/5.0L
B	2015-2020 2.7L/3.5L/5.0L

-NOTICE-

Before installing your new MAGNAFLOW system the OEM spare tire and spare tire heat shield must be permanently removed.




Step 2. Begin installing the new system by first using *Table 1.* to determine which Inlet Pipe Assembly to use for your vehicle. Once determined attach the Inlet Pipe Assembly to the OEM catalytic converter outlet pipes using the existing clamp and hardware. Locate the welded hanger to the rubber insulator. Leave all clamps and fasteners loose for final adjustment of the complete system once installed.



Step 3. Attach the Muffler Assembly to the Inlet Pipe Assembly with a supplied 3.00" clamp, fit the hanger into the rubber insulator.

INSTALLATION INSTRUCTIONS

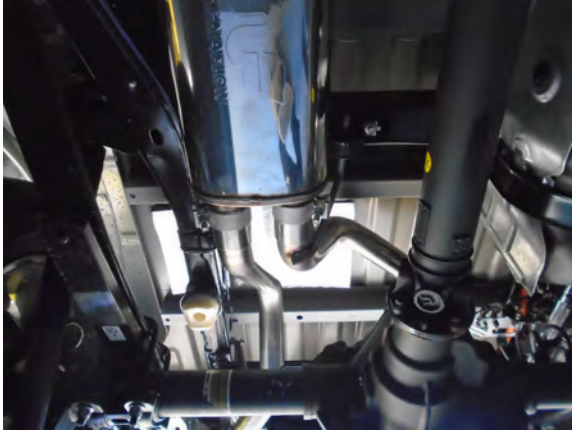

Step 4. Install both the Over Axle Pipes using the supplied 2.50" clamps. Locate the welded hanger to the OEM rubber insulator.



Step 5. To allow for the installation of a dual outlet system on a single outlet vehicle you will have top mount the supplied Hanger Brackets to existing holes in the factory frame rails using the supplied fasteners (8mm bolt and panel nut) as shown in the photos. Once completed you can now slide the Tailpipe assemblies onto the Over Axle pipes and fasten with the supplied 2.50" clamps and mount the hangers to the installed hanger brackets using the supplied rubber insulators.



Step 6. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.