



INSTALLATION INSTRUCTIONS



'13-'15 CADILLAC ATS V6 3.6L | PART NO. 15196

BILL OF MATERIALS:



- 1. INLET PIPE ASSY D/S
- 2. INLET PIPE ASSY P/S
- 3. MUFFLER T/P ASSY



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

SHOP SUPPLIES:

HARDWARE KIT:

- 1.[2] 2.50" Clamp
- 2.[2] 2.25" Clamp

MINIMUM REQUIRED TOOLS:



15mm



Hanger Tool (Or Pry Bar)


MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 30-35 ft-lbs for U-bolt clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

X INSTALLATION INSTRUCTIONS

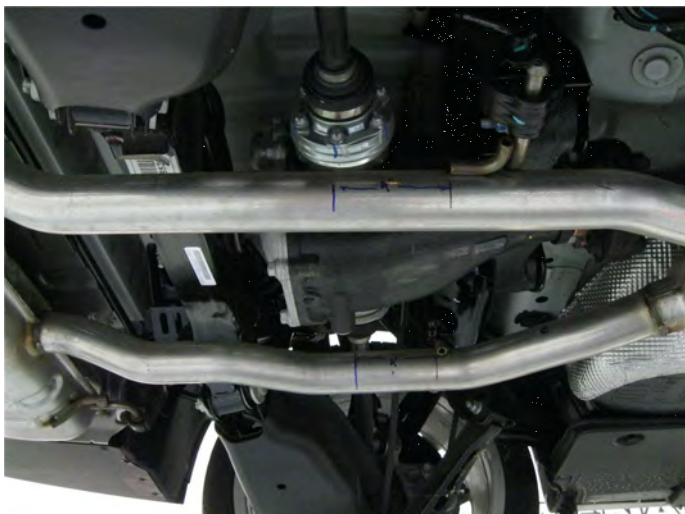

Step 1. To remove the OEM exhaust system you will first need to cut both pipes between the front and tail pipe mufflers 4.00" behind the welded hangers as indicated. Disengage all welded hangers from the rubber insulators and remove the OEM system. Do not damage or discard the rubber insulators or fasteners as they will be re-used to mount the new system. You can now remove the exhaust from the vehicle.



Step 2. Begin installation of the new system by fastening the Inlet Pipe Assemblies to the pipes you have just cut using the supplied 2.25" clamps. Locate the welded hangers to the rubber insulators. (Leave all clamps and fasteners loose for final adjustment of the complete system.)



Step 3. Next Install the Muffler Tail Pipe Assembly to the outlets of the Inlet Pipe Assemblies using the supplied 2.50" clamps. Insert hangers into rubber insulators.



Step 4. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.